

# COMPONENT LOCATIONS

## AUXILIARY FAN

Auxiliary Fan Motor .....	Front of radiator	
Auxiliary Fan Relay .....	Top of LH front wheel well, in relay box .....	201-2
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Receiver Drier Temperature Switch .....	On receiver drier, behind RH headlights .....	202-1
G101 .....	RH front fender, behind headlights .....	211-2
G102 .....	Behind instrument cluster .....	209-4

## BACKUP LIGHTS/TRANSMISSION KICKDOWN/ GLOVE BOX LIGHT/ENGINE OVERLOAD PROTECTION

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Intake Manifold Pressure Switch .....	Top of intake manifold	
Kickdown Solenoid .....	RH front of transmission .....	202-2
Kickdown Switch .....	Under accelerator pedal	
Overload Relief Valve .....	Behind power brake booster .....	201-1
Starter Lockout/Backup Light Switch .....	LH side of transmission .....	204-1
C104 (14 pins) .....	Under LH side of instrument panel .....	207-1
C138 (4 pins) .....	To left of spare tire .....	209-1
C139 (4 pins) .....	Ahead of RH rear light assembly .....	207-2
C146 (4 pins) .....	Beside upper console above accelerator pedal	210-6
C153 (2 pins) .....	LH front wheel well .....	206-2
G102 .....	Behind instrument cluster .....	209-4
G103 .....		
(300 D/CD) .....	In trunk, behind LH wheel well .....	203-2
(300 TD) .....	Above LH rear wheel well .....	205-1
G104 .....		
(300 D/CD) .....	Ahead of RH rear light assembly .....	209-3
(300 TD) .....	Ahead of RH rear light assembly .....	207-2

## ILLUMINATION: INSTRUMENT CLUSTER/CENTER CONSOLE

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Hazard Switch .....	On center console	
Flasher .....	In center console forward of shift lever	
C124 (1 pin) .....	Behind center console	
G102 .....	Behind instrument cluster .....	209-4
G109 .....	In console, base of gear shift selector	

Page-Figure

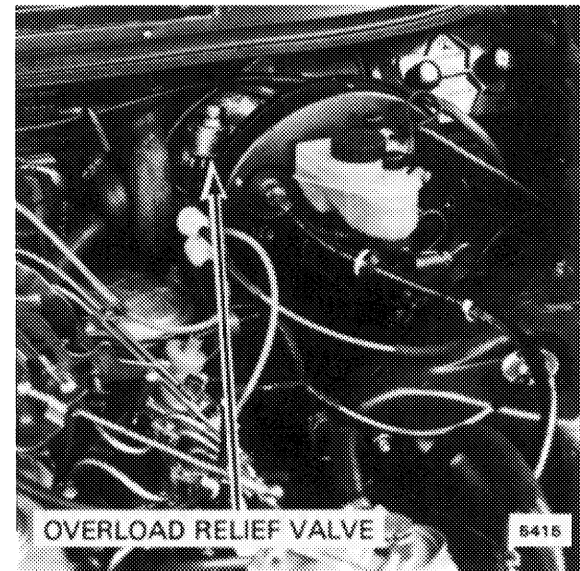


Figure 1 - LH Rear Corner of Engine Compartment

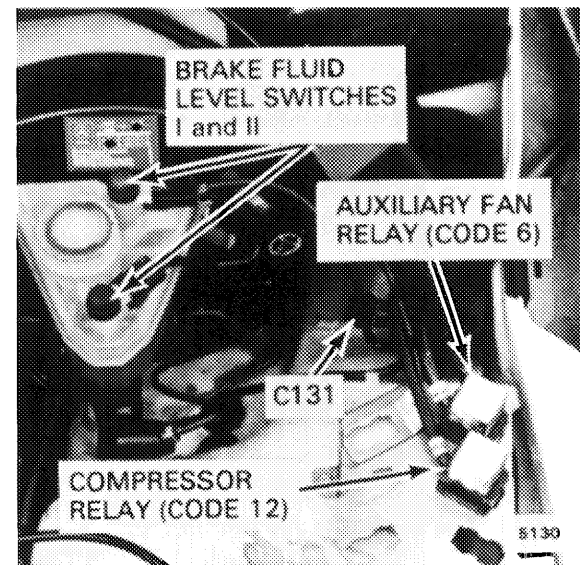


Figure 2 - Behind LH Front Wheel Well

# COMPONENT LOCATIONS

## CHARGING SYSTEM

		Page-Figure
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Ignition Switch .....	Instrument panel, right of steering column ....	208-1
Starter Assembly .....	Lower RH rear of engine	
G100 .....	RH front fender, ahead of battery .....	211-1

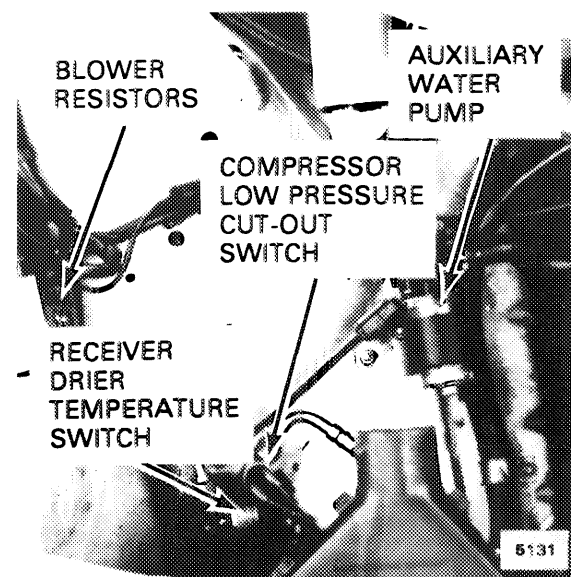


Figure 1 - Behind RH Headlights

## CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

Antenna Motor/Relay		
(300 D/CD) .....	Behind LH rear wheel well .....	203-2
(300 TD) .....	To left of spare tire .....	209-1
Fuse Box .....	LH rear corner of engine compartment .....	100-1
C135 (6 pins)		
(300 D/CD) .....	Behind LH rear wheel well	
(300 TD) .....	To left of spare tire .....	209-1
C148 (2 pins) .....	Behind upper console	
G102 .....	Behind instrument cluster .....	209-4
G103		
(300 D/CD) .....	In trunk, behind LH wheel well .....	203-2
(300 TD) .....	Above LH rear wheel well .....	205-1

## COURTESY LIGHTS

Door Switches .....	In each door jamb	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Rear Wiper Motor .....	Lower middle of tailgate .....	203-1
Tailgate Lock Switch .....	Inside lower middle area of tailgate .....	203-1
Warning Module .....	To right of parking brake support .....	207-1
C104 (14 pins) .....	Under LH side of instrument panel .....	207-1
C136 (8 terminals) .....	Top center of tailgate frame .....	208-2
G102 .....	Behind instrument cluster .....	209-4
G103		
(300 D/CD) .....	In trunk, behind LH wheel well .....	203-2
(300 TD) .....	Above LH rear wheel well .....	205-1
G104 .....	Ahead of RH rear light assembly .....	207-2
(D/CD) .....	Ahead of RH rear light assembly .....	209-3
(TD) .....	Ahead of RH rear light assembly .....	207-2

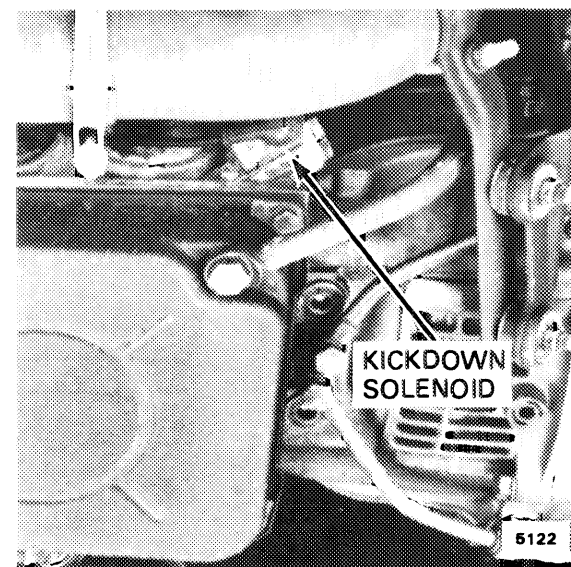


Figure 2 - RH Side of Transmission

202  
300  
D/CD/TD  
TURBO

# COMPONENT LOCATIONS

## HEADLIGHTS/FOG LIGHTS

		Page-Figure
Combination Switch .....	Upper LH side of steering column .....	204-2
Fuse Box .....	LH rear corner of engine compartment .....	100-1
C106 (14 pins) .....	To left of brake pedal support .....	207-1
C141 (4 pins) .....	Behind LH headlight assembly	
C142 (4 pins) .....	Behind RH headlight assembly	
G101 .....	RH front fender, behind headlights .....	211-2
G102 .....	Behind instrument cluster .....	209-4

## HEATED SEATS

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Seat Heaters .....	In each seat cushion	
Seat Heater Switches .....	On center console	
G102 .....	Behind instrument cluster .....	209-4

## HORNS/SLIDING ROOF

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Sliding Roof Motor .....	In trunk, above LH rear wheel well	
Sliding Roof Switch .....	On upper console	
Slip Rings .....	Behind center of steering wheel .....	204-2
Washer Motor .....	At base of washer fluid reservoir	
C106 (14 pins) .....	To left of brake pedal support .....	207-1
G101 .....	RH front fender, behind headlights	
G102 .....	Behind instrument cluster .....	209-4

## LIGHTS: MARKER/LICENSE/TRUNK (300 D/CD)

Fuse Box .....	LH rear corner of engine compartment .....	100-1
C104 (14 pins) .....	Under left side of instrument panel .....	207-1
G103 .....	In trunk, behind LH wheel well .....	203-2
G104 .....	Ahead of RH rear light assembly .....	209-3

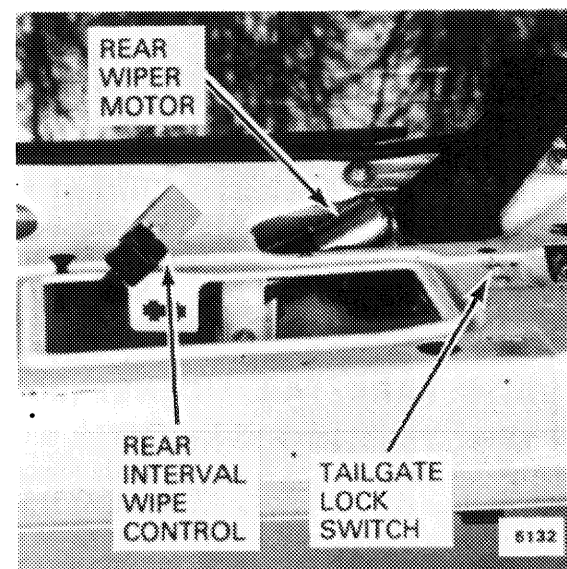


Figure 1 - Below Tailgate Window

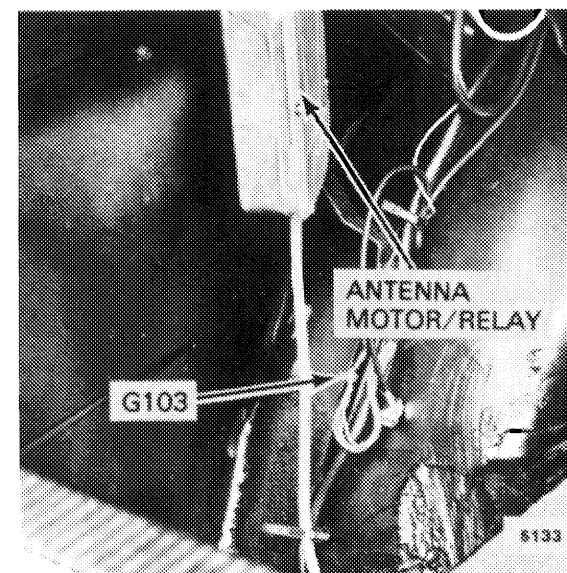


Figure 2 - Behind LH Rear Wheel Well (D/CD only)

## LIGHTS: PARK/TAIL (300 D/CD)

Fuse Box .....	LH rear corner of engine compartment .....	100-1
C104 (14 pins) .....	Under LH side of instrument panel .....	207-1
C141 (4 pins).....	Behind LH headlight assembly	
C142 (4 pins).....	Behind RH headlight assembly	
G101 .....	RH front fender, behind headlights.....	211-2
G102 .....	Behind instrument cluster .....	209-4
G103 .....	In trunk, behind LH wheel well .....	203-2
G104 .....	Ahead of RH rear light assembly .....	209-3

204  
300  
D/CD/TO  
TURBO

## LIGHTS: PARK/TAIL/LICENSE (300 TD)

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Rear Wiper Motor .....	Inside lower middle area of tailgate .....	203-1
C104 (14 pins) .....	Under LH side of instrument panel .....	207-1
C136 (8 terminals) .....	Top center of tailgate frame.....	208-2
C138 (4 pins).....	To left of spare tire .....	209-1
C139 (4 pins).....	Ahead of RH rear light assembly .....	207-2
C141 (4 pins).....	Behind LH headlight assembly	
C142 (4 pins).....	Behind RH headlight assembly	
G101 .....	RH front fender, behind headlights.....	211-2
G102 .....	Behind instrument cluster .....	209-4
G103 .....	Above LH rear wheel well .....	205-1
G104 .....	Ahead of RH rear light assembly .....	207-2

## POWER DISTRIBUTION

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Ignition Switch .....	Instrument panel, right of steering column ....	208-1
Starter Assembly .....	Lower RH rear of engine	
C104 (14 pins).....	Under LH side of instrument panel .....	207-1
C105 (3 terminals) .....	On RH fender well forward of battery .....	210-2
G100 .....	RH front fender, ahead of battery.....	211-1

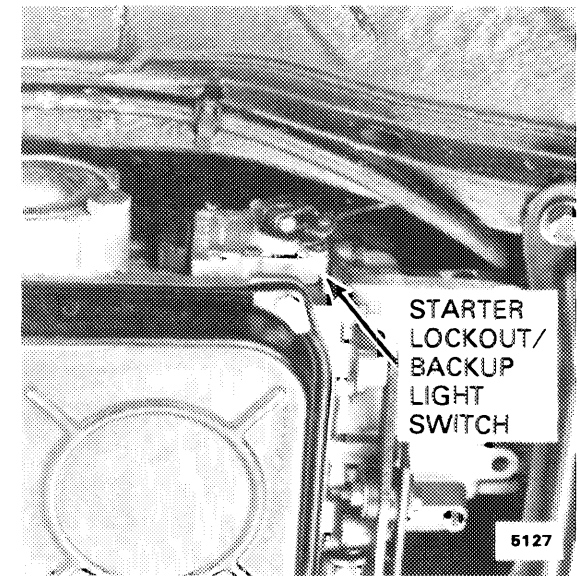


Figure 1 - LH Side of Transmission  
(D/CD only)

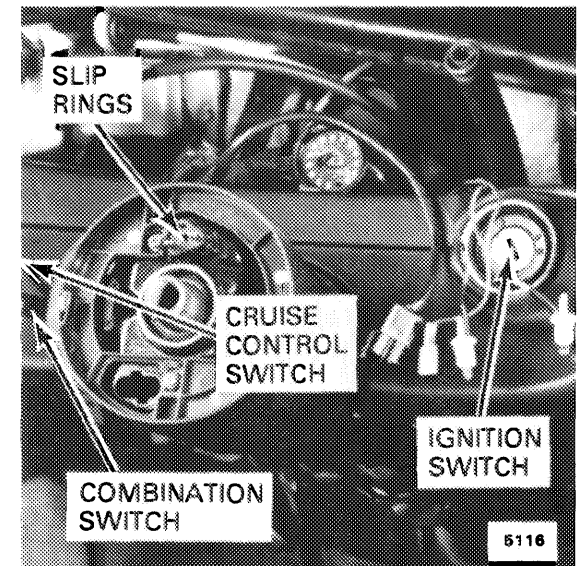


Figure 2 - Steering Column

# COMPONENT LOCATIONS

## POWER WINDOWS

Console Switch Group .....	On center console	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Rear Window Switches .....	Below each rear window	
Window Motors .....	Below each window .....	209-2
Window Relay .....	Behind instrument cluster .....	205-2
C107 (8 pins) .....	Under console	
C108 (2 pins) .....	Under console	
G102 .....	Behind instrument cluster .....	209-4

## PRE-GLOW SYSTEM

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Glow Plug Control Relay .....	Behind LH headlights .....	206-2
Ignition Switch .....	Instrument panel, right of steering column ....	208-1
Starter Assembly .....	Lower RH rear of engine	
Starter Lockout/Backup		
Light Switch .....	LH side of transmission .....	204-1
Washer Motor .....	Bottom of washer fluid reservoir	
C130 (6 pins) .....	Connected to glow plug control relay	
C137 (6 pins) .....	Connected to glow plug control relay	
C141 (4 pins) .....	Behind LH headlight assembly	
C146 .....	Beside upper console above accelerator pedal ...	210-6
G100 .....	RH front fender, ahead of battery .....	211-1
G102 .....	Behind instrument cluster .....	209-4

## REAR DEFOGGER

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Rear Defogger Switch .....	On upper console	
Rear Defogger Timer Relay ..	Behind LH side of instrument cluster .....	205-2
C104 (14 pins) .....	Under LH side of instrument panel .....	207-1
C136 (8 terminals) .....	Top center of tailgate frame .....	208-2
G102 .....	Behind instrument cluster .....	209-4
G103		
(300 D/CD) .....	In trunk, behind LH wheel well .....	203-2
(300 TD) .....	Above LH rear wheel well .....	205-1
G104		
(300 D/CD) .....	Ahead of RH rear light assembly .....	209-3
(300 TD) .....	Ahead of RH rear light assembly .....	207-2

Page-Figure

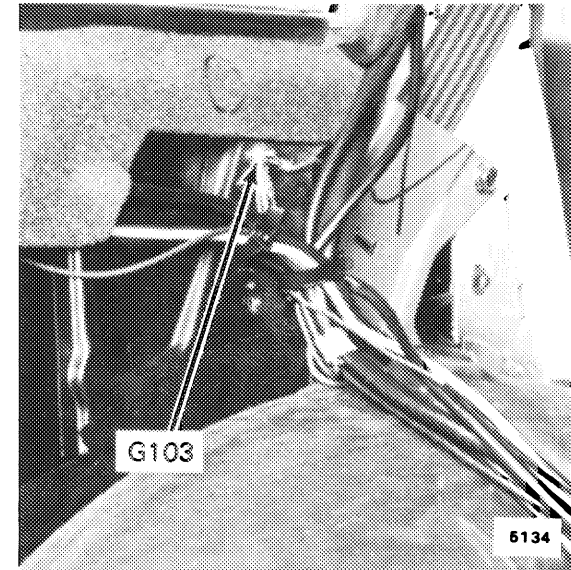


Figure 1 - Above LH Rear Wheel Well  
(TD only)

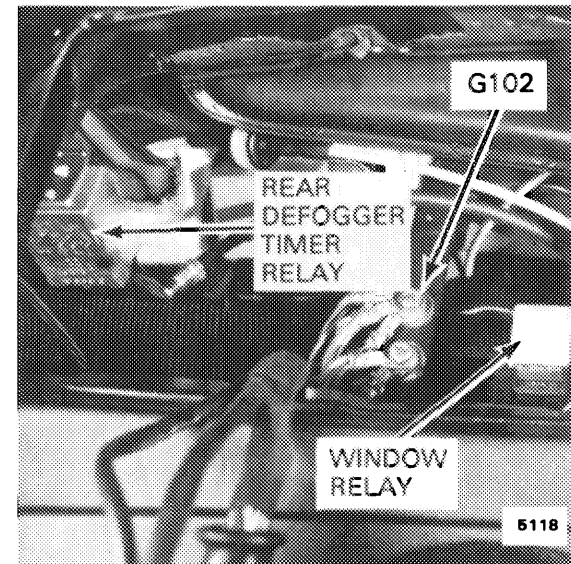


Figure 2 - Behind Instrument Cluster

# COMPONENT LOCATIONS

## REAR WIPER/WASHER

		Page-Figure
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Rear Interval Wipe Control .....	In lower RH side of tailgate .....	203-1
Rear Washer Motor .....	Behind fuel tank intake tube .....	207-2
Rear Wiper Motor .....	Lower middle of tailgate .....	203-1
C136 (8 terminals) .....	Top center of tailgate frame .....	208-2
C139 (4 pins) .....	Ahead of RH rear light assembly .....	207-2
G103 .....	Above LH rear wheel well .....	205-1
G104 .....	Ahead of RH rear light assembly .....	207-2

206

300  
D/CD/TD  
TURBO

## SEAT BACKREST LOCKING SYSTEM

Door Switches .....	In each door jamb	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Switchover Valve .....	Under LH side of I/P	
Warning Module .....	To right of parking brake support .....	207-1
C160 (1 pin) .....	In RH door of coupe	
C161 (1 pin) .....	In RH door of coupe	
G102 .....	Behind instrument cluster .....	209-4

## START/STOP (IGNITION SWITCH)

Fuel Shutoff Diaphragm .....	Rear of fuel injection pump .....	206-1
Ignition Switch .....	Instrument panel, right of steering column ....	208-1
Starter Assembly .....	Lower RH rear of engine	
Starter Lockout/Backup		
Light Switch .....	LH side of transmission .....	204-1
C105 (3 terminals) .....	On RH fender well forward of battery .....	210-2
C146 (4 pins) .....	Beside upper console above accelerator pedal	210-6
G100 .....	RH front fender, ahead of battery .....	211-1

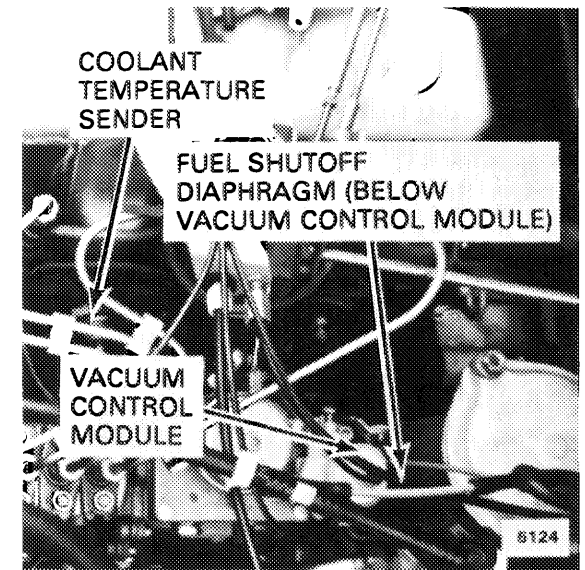


Figure 1 - LH Rear of Engine

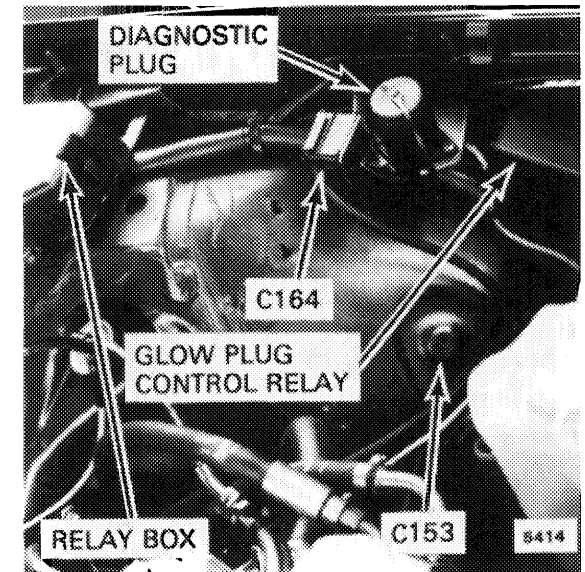


Figure 2 - LH Front Wheel Well



## COMPONENT LOCATIONS

### STOPLIGHTS/CRUISE CONTROL

		Page-Figure
Brake Switch .....	Top of brake pedal support	
Cruise Control Actuator .....	LH front of engine .....	210-5
Cruise Control Amplifier .....	To right of parking brake support .....	207-1
Cruise Control Switch .....	Upper LH side of steering column .....	204-2
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Vehicle Speed Sensor .....	Mounted on rear of speedometer .....	209-5
C104 (14 pins) .....	Under LH side of instrument panel .....	207-1
C138 (4 pins) .....	To left of spare tire .....	209-1
C139 (4 pins) .....	Ahead of RH rear light assembly .....	207-2
C140 (6 pins) .....	To left of brake pedal support .....	207-1
C164 (8 pins) .....	On LH front wheel well .....	206-2
G102 .....	Behind instrument cluster .....	209-4
G103		
(300 D/CD) .....	In trunk, behind LH wheel well .....	203-2
(300 TD) .....	Above LH rear wheel well .....	205-1
G104		
(300 D/CD) .....	Ahead of RH rear light assembly .....	209-3
(300 TD) .....	Ahead of RH rear light assembly .....	207-2

### TURN SIGNAL/HAZARD LIGHTS

Combination Switch .....	Upper LH side of steering column .....	204-2
Flasher .....	In center console forward of shift lever .....	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Hazard Switch .....	On center console .....	
C104 (14 pins) .....	Under LH side of instrument panel .....	207-1
C106 (14 pins) .....	To left of brake pedal support .....	207-1
C138 (4 pins) .....	To left of spare tire .....	209-1
C139 (4 pins) .....	Ahead of RH rear light assembly .....	207-2
C141 (4 pins) .....	Behind LH headlight assembly	
C142 (4 pins) .....	Behind RH headlight assembly	
G101 .....	RH front fender, behind headlights .....	211-2
G102 .....	Behind instrument cluster .....	209-4
G103		
(300 D/CD) .....	In trunk, behind LH wheel well .....	203-2
(300 TD) .....	Above LH rear wheel well .....	205-1
G104		
(300 D/CD) .....	Ahead of RH rear light assembly .....	209-3
(300 TD) .....	Ahead of RH rear light assembly .....	207-2

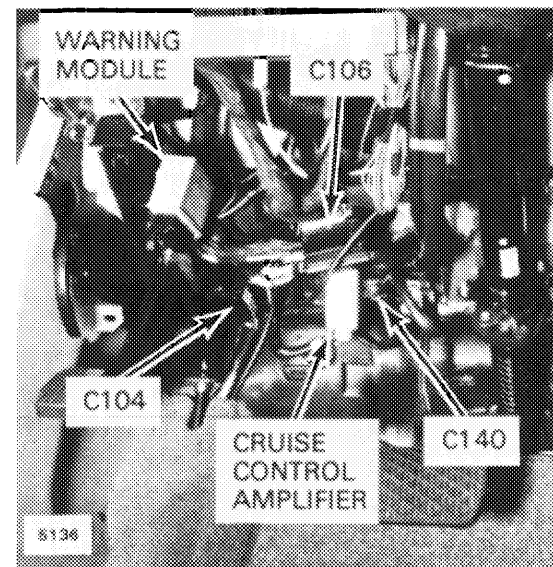


Figure 1 - Above Driver's Footwell

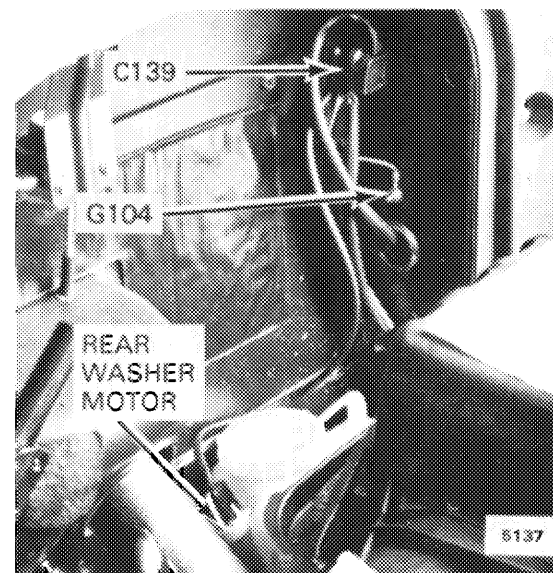


Figure 2 - In Front of RH Rear Lights (TD only)

# COMPONENT LOCATIONS

## WARNING INDICATORS/GAUGES/CLOCK / INSTRUMENT CLUSTER ILLUMINATION

Brake Wear Sensors	In each front brake pad	
Coolant Temperature Sender	LH side of cylinder head	206-1
Fuel Gauge Sender	Under first aid kit tray	
Fuse Box	LH rear corner of engine compartment	100-1
TDC Amplifier	In cap of diagnostic connector	206-2
TDC Sensor	Front of engine, above vibration dampener	
C104 (14 pins)	Under LH side of instrument panel	207-1
C131 (2 pins)	Behind LH front wheel well, below fuse box	201-2
C132 (2 pins)	Behind RH front wheel well, at battery	
C153 (2 pins)	LH front wheel well	206-2
G101	RH front fender, behind headlights	211-2
G102	Behind instrument cluster	209-4
G103		
(300 D/CD)	In trunk, behind LH wheel well	203-2
(300 TD)	Above LH rear wheel well	205-1

## WARNING SYSTEM

Brake Fluid Level		
Switches	Brake fluid reservoir	201-2
Door Switches	In each door jamb	
Driver's Seatbelt Switch	Part of driver's seatbelt assembly	
Fuse Box	LH rear corner of engine compartment	100-1
Key Warning Switch	Part of ignition switch	208-1
Parking Brake Switch	On parking brake support	
Warning Module	To right of parking brake support	207-1
C104 (14 pins)	Under LH side of instrument panel	207-1
C131 (2 pins)	Behind LH front wheel well, below fuse box	201-2
G102	Behind instrument cluster	209-4

## WIPER/WASHER

Combination Switch	Upper LH side of steering column	204-2
Fuse Box	LH rear corner of engine compartment	100-1
Interval Wipe Control	Behind LH side of instrument cluster	209-4
Washer Motor	Bottom of washer fluid reservoir	
Wiper Motor	In center of fresh air duct	
C106 (14 pins)	To left of brake pedal support	207-1
C112 (6 pins)	To upper right of power brake booster	209-6
C141 (4 pins)	Behind LH headlight assembly	
G102	Behind instrument cluster	209-4

Page-Figure

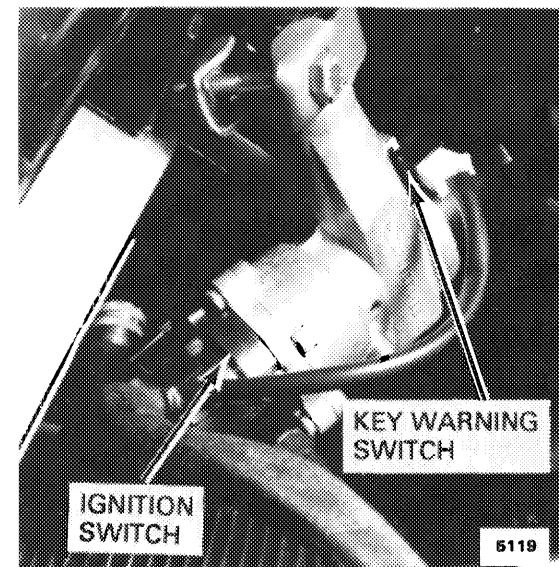


Figure 1 - Ignition Switch (As Seen From Below)

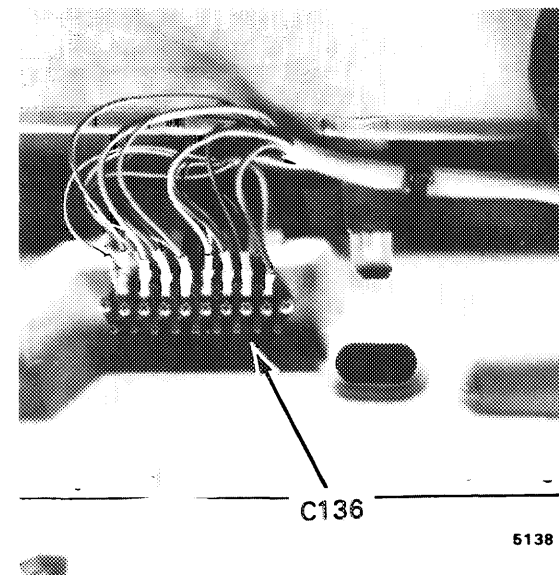


Figure 2 - Top of Tailgate Frame



# COMPONENT LOCATIONS

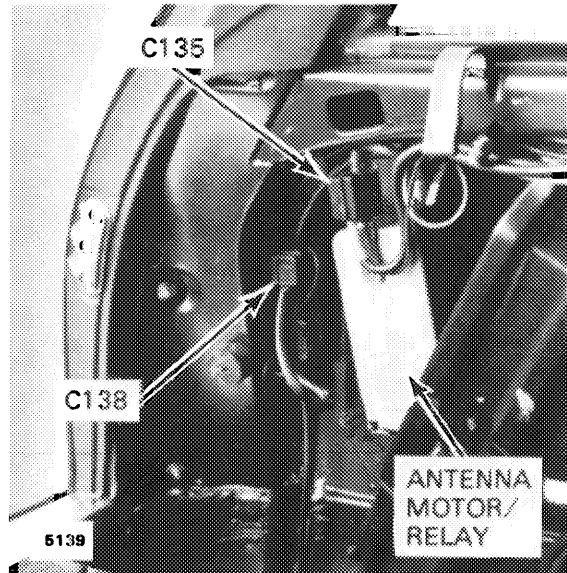


Figure 1 - Spare Tire Well (TD only)

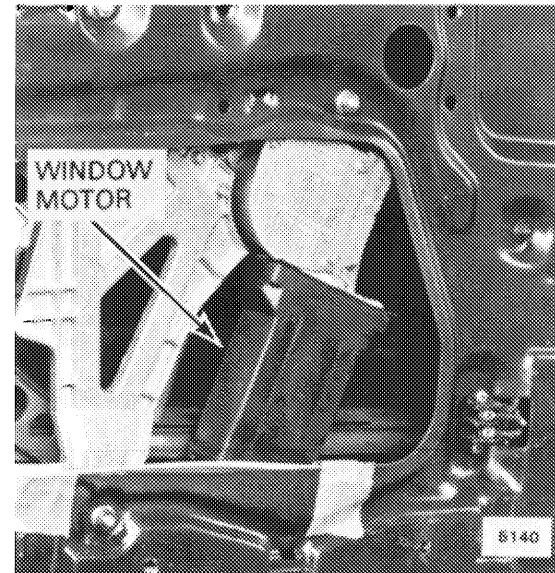


Figure 2 - Inside Driver's Door

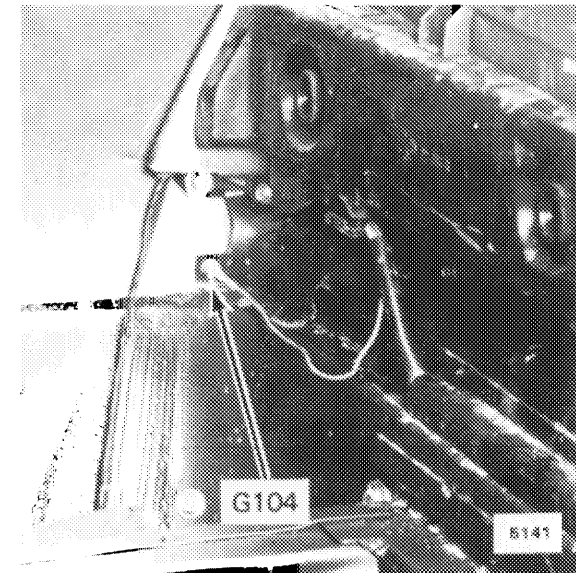


Figure 3 - In Front of RH Rear Lights (D/CD only)

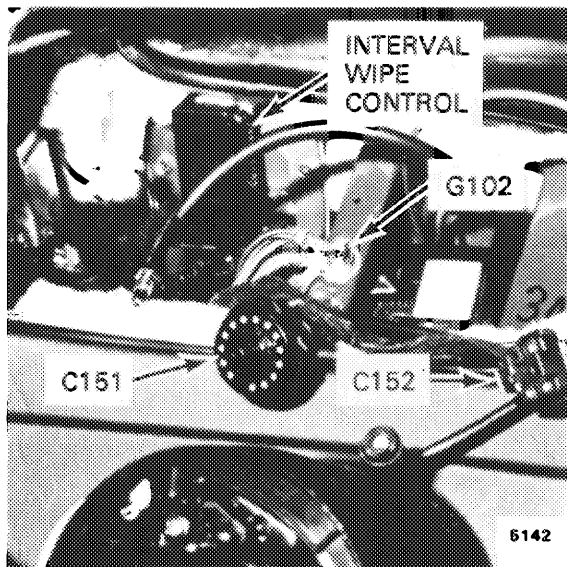


Figure 4 - Behind Instrument Cluster

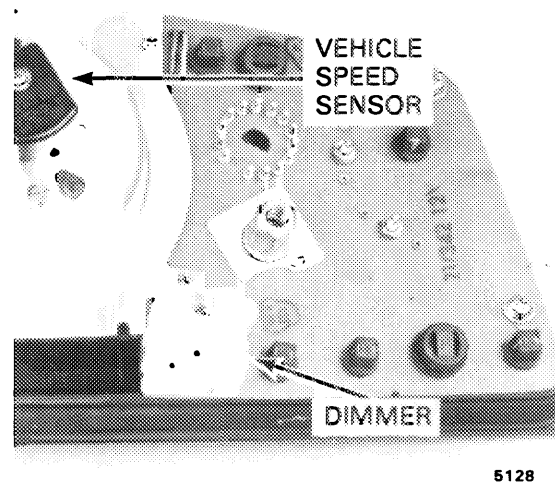


Figure 5 - Back of Instrument Cluster

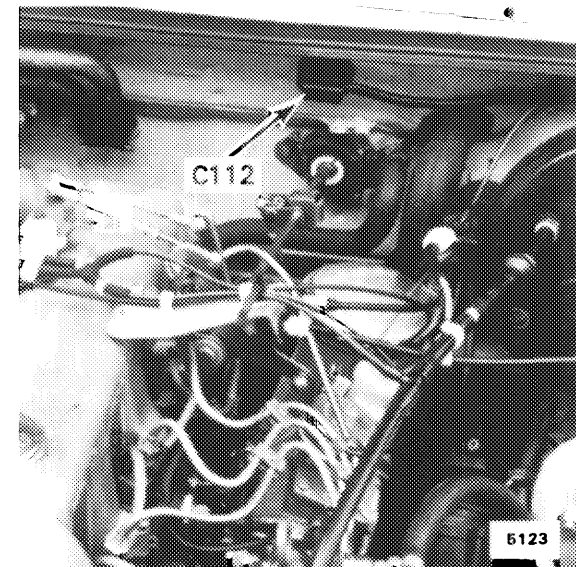


Figure 6 - Right of Power Brake Booster

# COMPONENT LOCATIONS

210  
300  
D/CD/TD  
TURBO

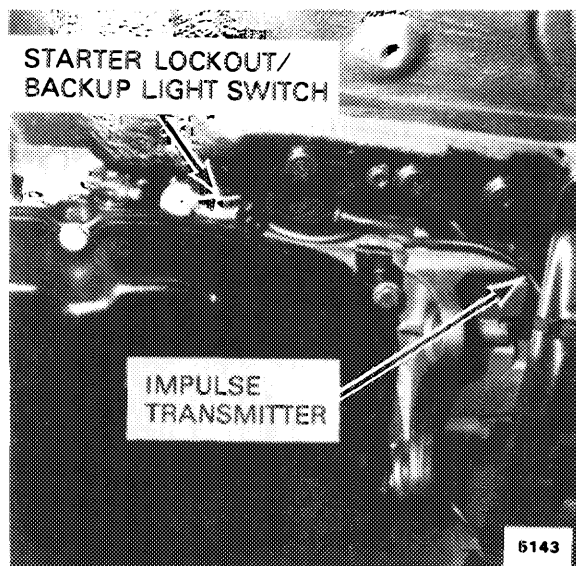


Figure 1 - LH Rear of Transmission (TD only)

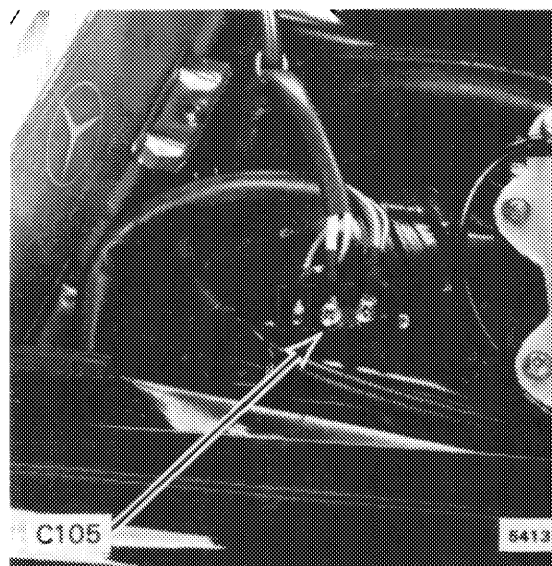


Figure 2 - RH Wheel Well

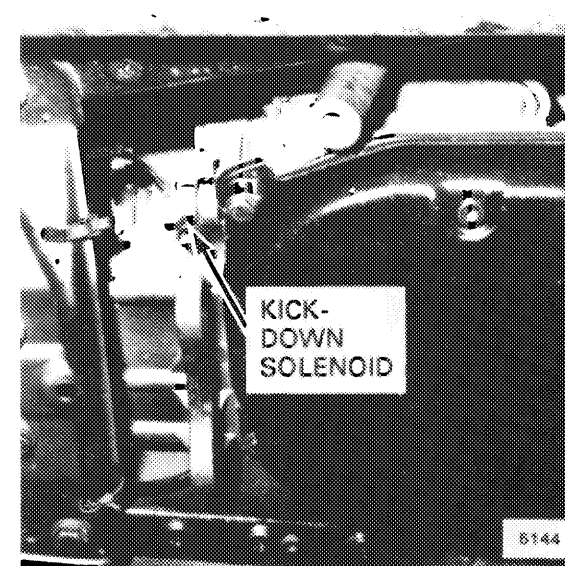


Figure 3 - RH Rear of Transmission (TD only)

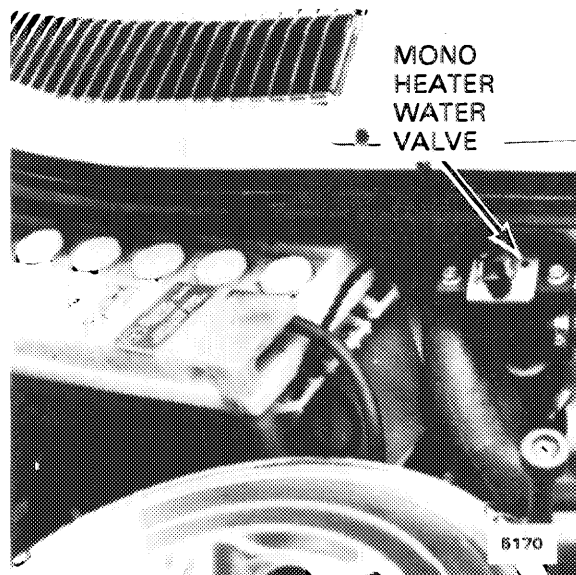


Figure 4 - RH Rear Corner of Engine Compartment

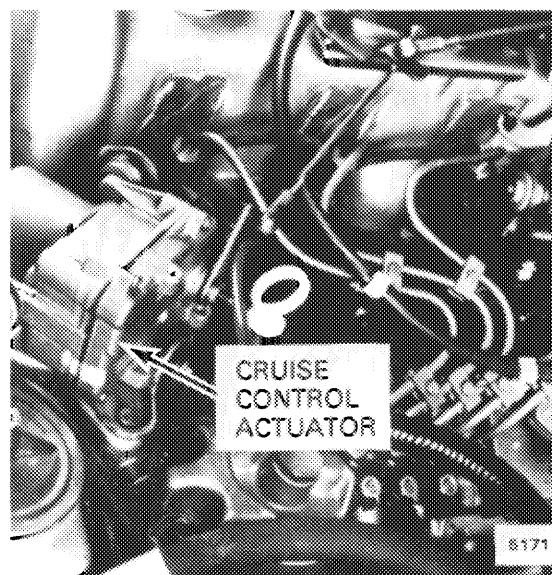


Figure 5 - LH Front of Engine (TD only)

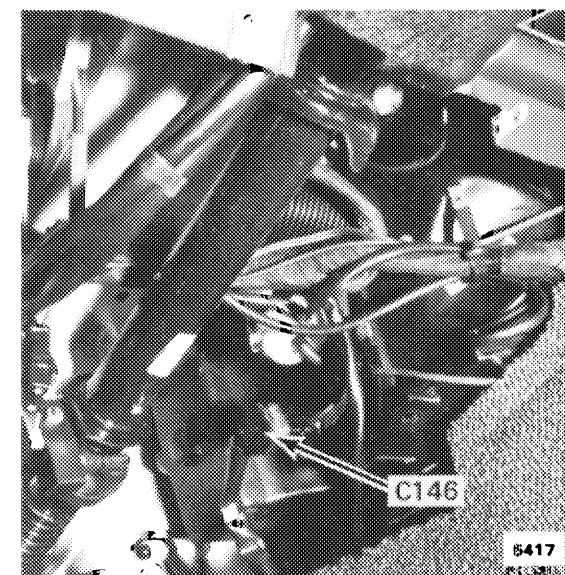


Figure 6 - To Right of Steering Column

## COMPONENT LOCATIONS

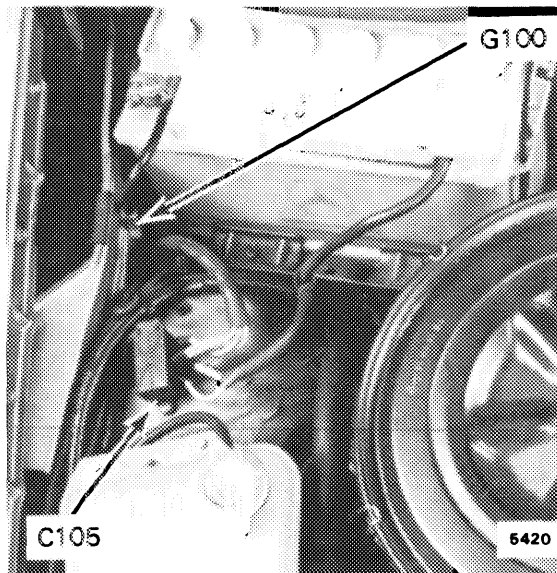


Figure 1 - RH Rear Corner of Engine Compartment

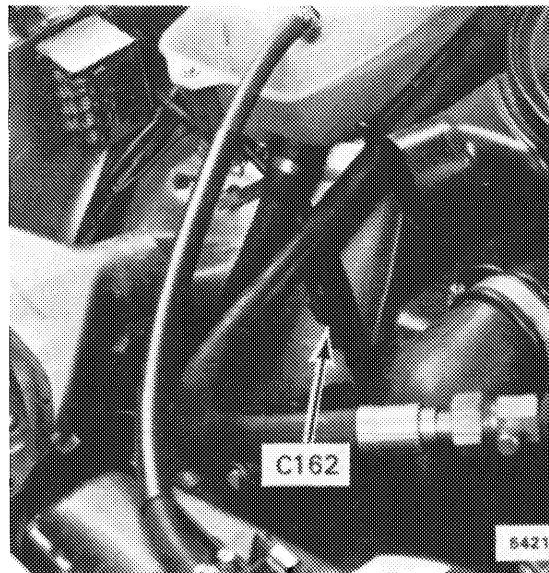


Figure 3 - RH Wheel Well Area


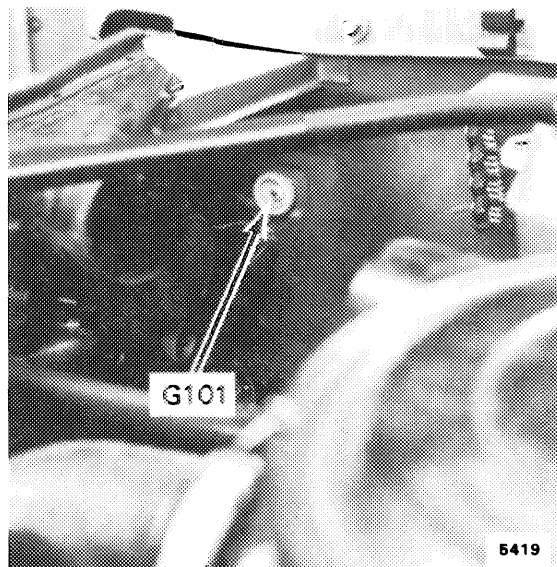


Figure 2 - RH Front Fender Behind Headlights

## PUSHBUTTON CONTROL ASSEMBLY

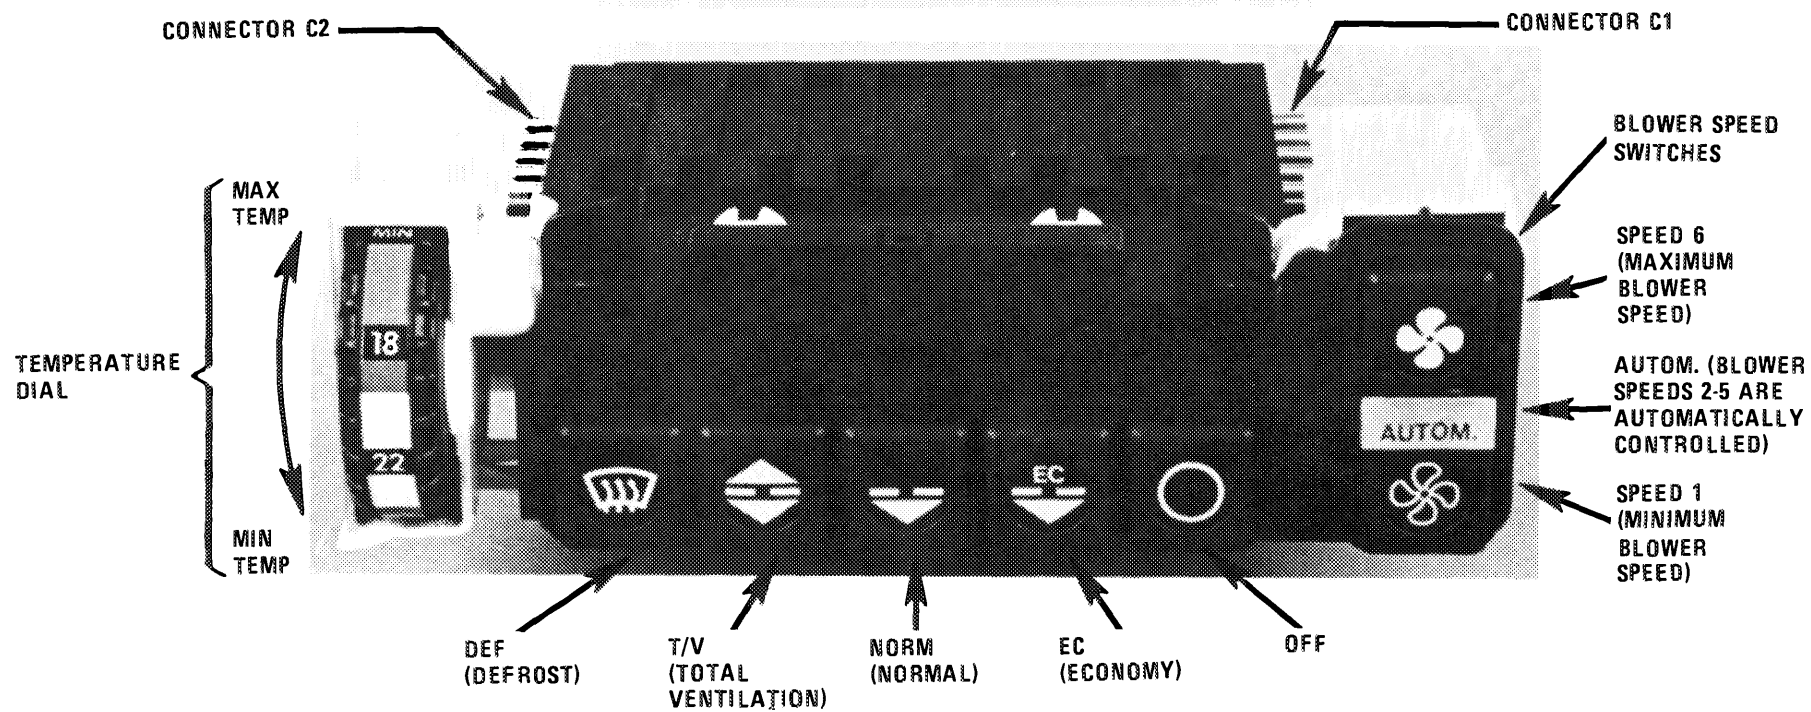

### FUNCTION CONTROL SWITCHES

NOTE: ONLY ONE FUNCTION IS TO BE SELECTED AT ANY TIME.

300

ACC

ALL MODELS

# INDEX

## 300 D/CD/TD (TURBO)

ACC Grounds Distribution .....	308
ACC Power Distribution .....	308
Air Delivery (Electrical) .....	302
Air Delivery (Vacuum) .....	304
Component Location Table .....	310
Component Mode Table .....	309
Compressor Clutch Control .....	307
Pushbutton Control Assembly .....	300
Temperature Control .....	306

## 380 SL

ACC Grounds Distribution .....	332
ACC Power Distribution .....	332
Air Delivery (Electrical) .....	326
Air Delivery (Vacuum) .....	328
Component Location Table .....	334
Component Mode Table .....	333
Compressor Clutch Control .....	331
Pushbutton Control Assembly .....	300
Temperature Control .....	330

## 300 SD (TURBO)

ACC Grounds Distribution .....	321
ACC Power Distribution .....	321
Air Delivery (Electrical) .....	314
Air Delivery (Vacuum) .....	316
Component Location Table .....	323
Component Mode Table .....	322
Compressor Clutch Control .....	319
Pushbutton Control Assembly .....	300
Temperature Control .....	320

## 380 SEL/SEC


ACC Grounds Distribution .....	321
ACC Power Distribution .....	321
Air Delivery (Electrical) .....	314
Air Delivery (Vacuum) .....	316
Component Location Table .....	323
Component Mode Table .....	322
Compressor Clutch Control .....	318
Pushbutton Control Assembly .....	300
Temperature Control .....	320



## AIR DELIVERY (ELECTRICAL)

(For Component Locations See Page 310)

(For Component Locations See Page 310)

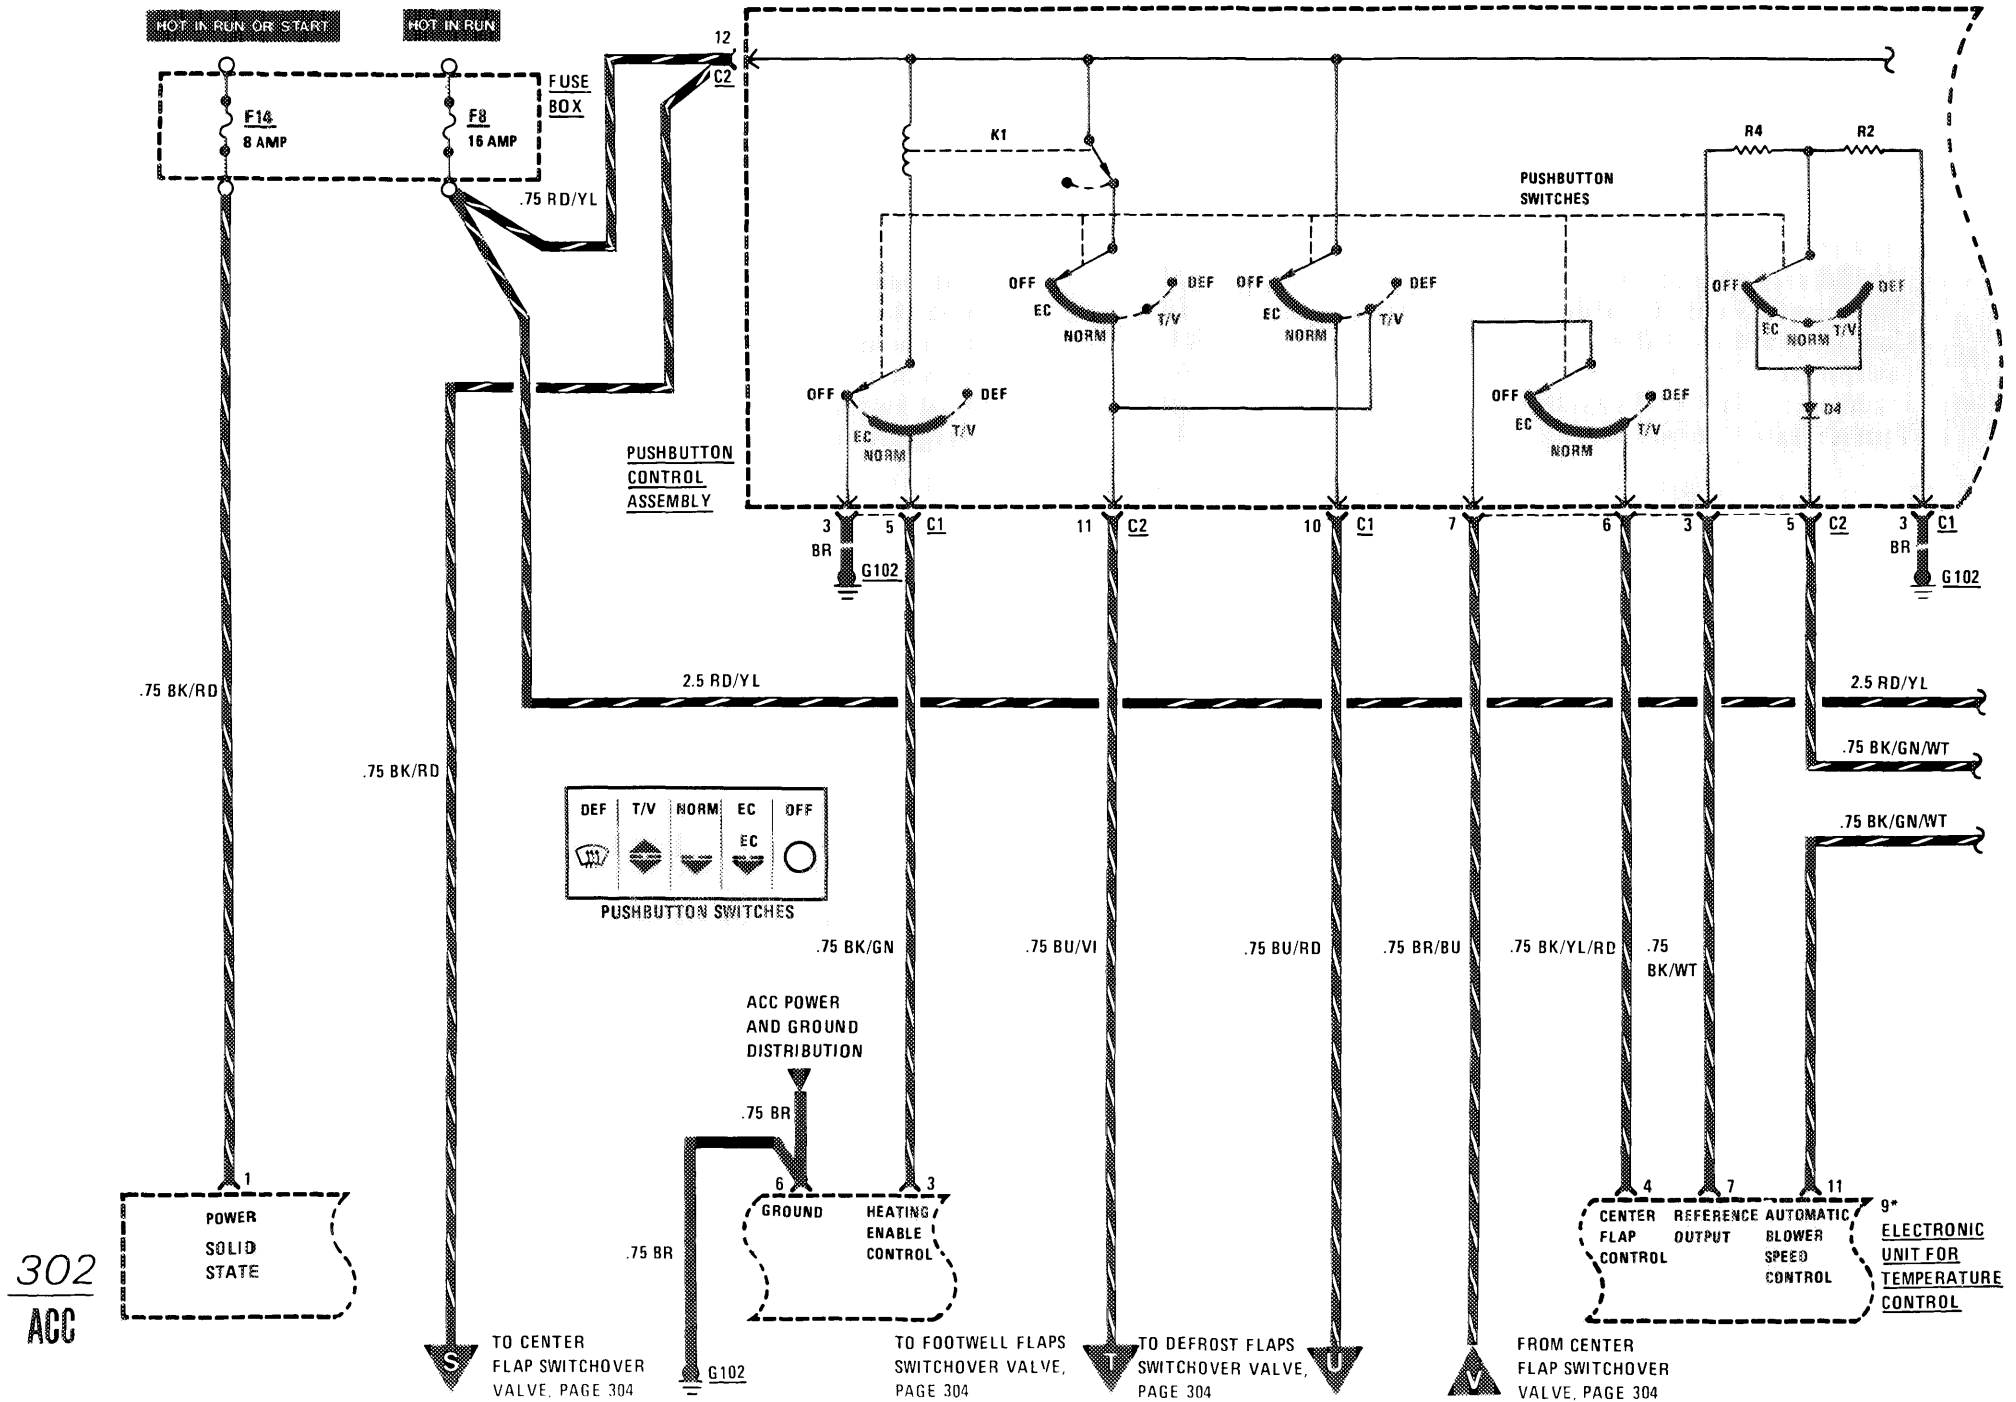



# AIR DELIVERY (ELECTRICAL)

(For Component Locations See Page 310)

300 D/CD/TD

